How to use Real Player to view the video stream of IC-9000

- 1. Download the free Real Player from http://www.real.com/
- 2. Install the Real Player utility.
- 3. Open the Real Player by clicking on Start >> All Programs >> RealNetworks >> RealPlayer.



4. In the bottom right corner, click on "Playlist"

Geal Pi	+	Now P	Get RealPlayer	•	_ = ×
		Te	alPlave		
					🛛 🖓 Playlist
• <	К =	> ≪ ≫(0:0	0 / 0:00 🌗	

5. In the Playlist, click on Plus to add clips to Playlist



7. In the open box, type the URL address of the video stream of IC-90000

Add URL	×
Ø	Type the location of a clip or web page, and RealPlayer will open it for you.
<u>O</u> pen:	•
	OK Cancel Browse

rtsp://ip_cam_address/CAM_ID.password

(for MPEG4 video + AMR-NB audio)

rtsp://ip_cam_address/CAM_ID.password.mp2 (for MPEG4 video +MPEG2 audio) If you are not sure the address of your IC-9000, you may verify it in the configuration page of IC-9000. Go to Video >> 3GPP/RTSP. Copy the Access URL then paste into the Playlist.

(-) (-) (-) (-) (-) (-) (-) (-) (-) (-)	83.101/ ・ P · B C × 2 印-Camera × 1 分 公 税				
<u>File Edit View Favorites</u>	s <u>T</u> ools <u>H</u> elp				
,					
Internet	Camera				
	3GPP/RTSP Settings				
L Information	Enable 3GPP/RTSP O Disable 3GPP/RTSP				
Network	3GPP bandwidth 64Kbps 🔻				
🖸 Video	Select resolution & frame rate automatically				
Display	○ Use the following values				
Video Settings	Resolution 320x240(QVGA) -				
Night Mode	Frame rate 5 fps 💌				
Schedule	Inable audio Insable audio				
	Access URL rtsp://192.168.3.101/002051067.ipcam				
L Admin	* Notice : usually,public IP address is needed for rtsp access!				
language: English 🔻	Save & Apply				
	۰ (ا				

8. Click OK after you type in your URL address.

Add URL	×)				
Ø	Type the location of a clip or web page, and RealPlayer will open it for you.				
<u>O</u> pen:	rtsp://192.168.3.101/002051067.ipcam 👻				
	OK Cancel <u>B</u> rowse				

9. Close Playlist box.



10. Click on Play.



11. The video stream displays in RealPlayer.

