
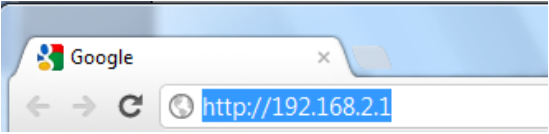
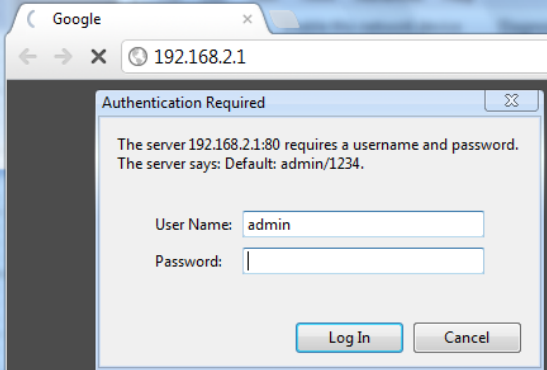
 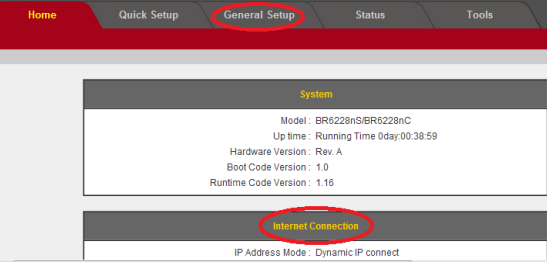

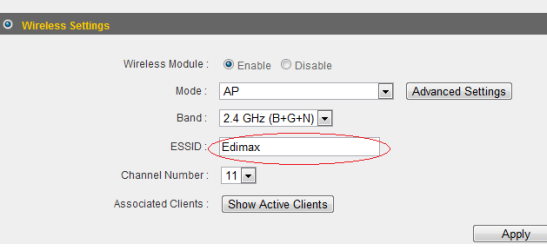
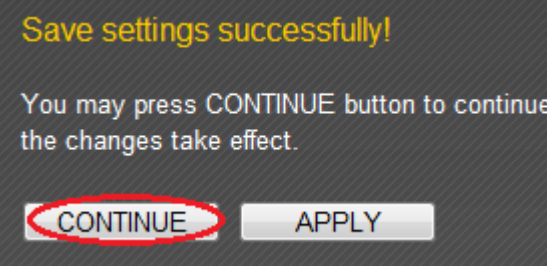



## How to setup my wireless security in Edimax wireless router.

After you configure the router to have Internet connection, the next step is to setup a wireless security password to protect your wifi network from unauthorized wifi access.


	<p>Open your web browser like Google Chrome, Internet Explorer.</p> <p>Type in <a href="http://192.168.2.1">http://192.168.2.1</a> hit Enter.</p>
	<p>The web page request a username and a password. The default username is admin. The default password is 1234.</p> <p>Click on Login.</p>
	<p>You are in the main page of the router's configuration.</p> <p>Click on General Setup.</p>
	<p>Click on Wireless</p>
	<p>Under the Wireless Settings, you will see the ESSID.</p> <p>ESSID is the identification of your wifi network.</p> <p>The ESSID by default is Edimax. You can change it to any other name.</p>
	<p>Click on Apply. Click on Continue. We need to continue to setup the wireless security.</p>

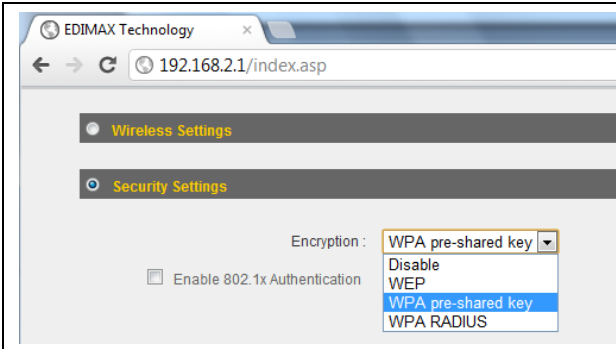


Click on Security Settings.  
The default Encryption is Disable.  
We recommend you select WPA preshare key.

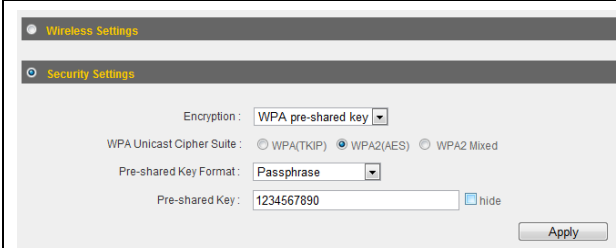

In WPA Unicast Cipher Suite, we recommend you select WPA2 AES.  
Keep the pre-shared key format as Passphrase.  
Create your own security password and type your password in the Pre-shared Key. Click on Apply.

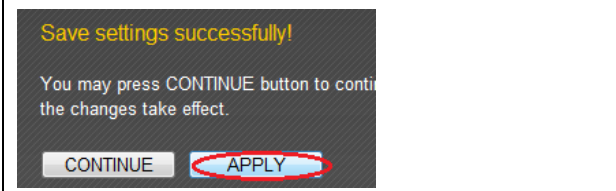

Click on Apply.

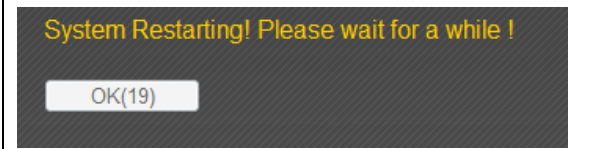

Router saves settings and reboots.

Congratulations! You just set up a wireless security enabled network.  
Please have your wireless computers connect to your wifi network. You will need to enter your wireless security password correctly in order to connect to the wireless network.